




WE PUT EVERYTHING WITHIN REACH.

Assembly Guide

40641

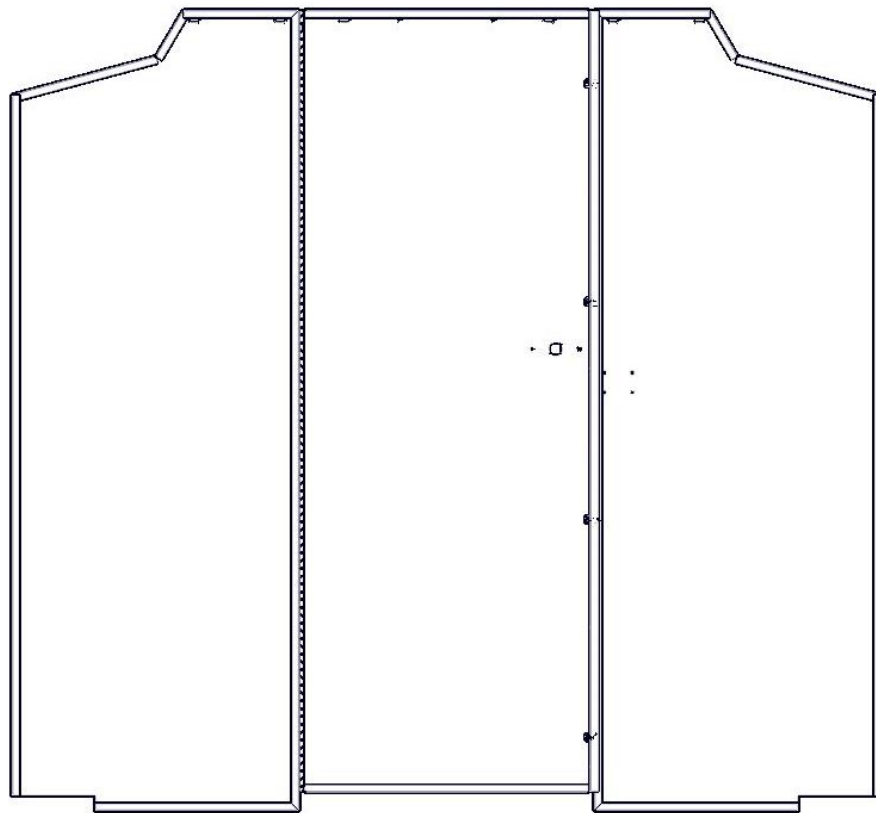

Kargo Master
Rancho Cordova, CA 95742
800-343-7486
CustomerService@KargoMaster.com

DATE: _____

***PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING,
INSTALLING, AND USING THIS PRODUCT***

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Wrench and Socket	7/16" Wrench and Socket
------------------------	-------------------------



Table of Contents

Parts List	2
Hardware List	2
Step 1 Assembly	3
Step 2 Tighten	4



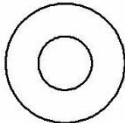
Before You Begin

- Read all instructions.
- Be sure to have wing kit for your van application.

Parts

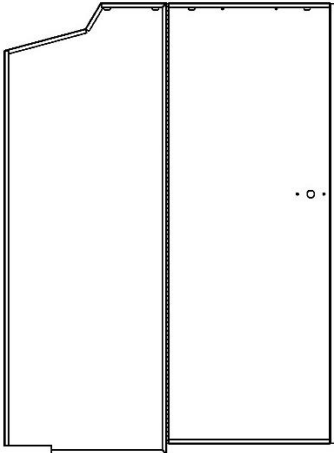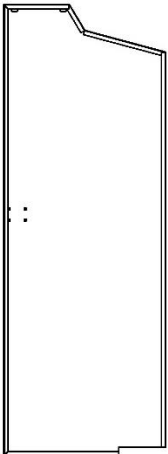ITEM NO.	40641 Parts	DESCRIPTION	QTY.
A		DOOR ASSEMBLY	1
B		PASSENGER SIDE PANEL	1
		Hardware Kit	1


Hardware

ITEM NO.	TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		92979A114	.25-20 x .625 Flange HH	4
2		93298A110	.25-20 Flanged Nyloc Nut	4
3		90126A029	.25 flat washer	8


Step 1 – Bolt Together

A.


- Place both pieces (A&B) flat on the ground or table. Be sure to have the flanges facing upward so you can access the bolt holes.

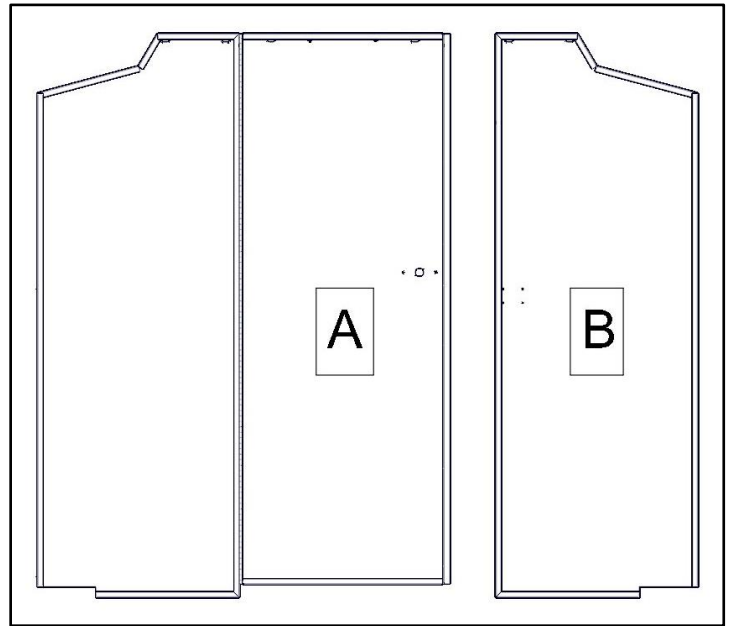

- Bolt together using a 1/4"-20 x .625" flanged hex bolt and a 1/4"-20 flanged nyloc nut.
- If installing the Door Kit (40260), Be sure to put two flat washers in between the two panels. This is used to get correct spacing.
- If no door kit is being used the washers (3) are not needed.

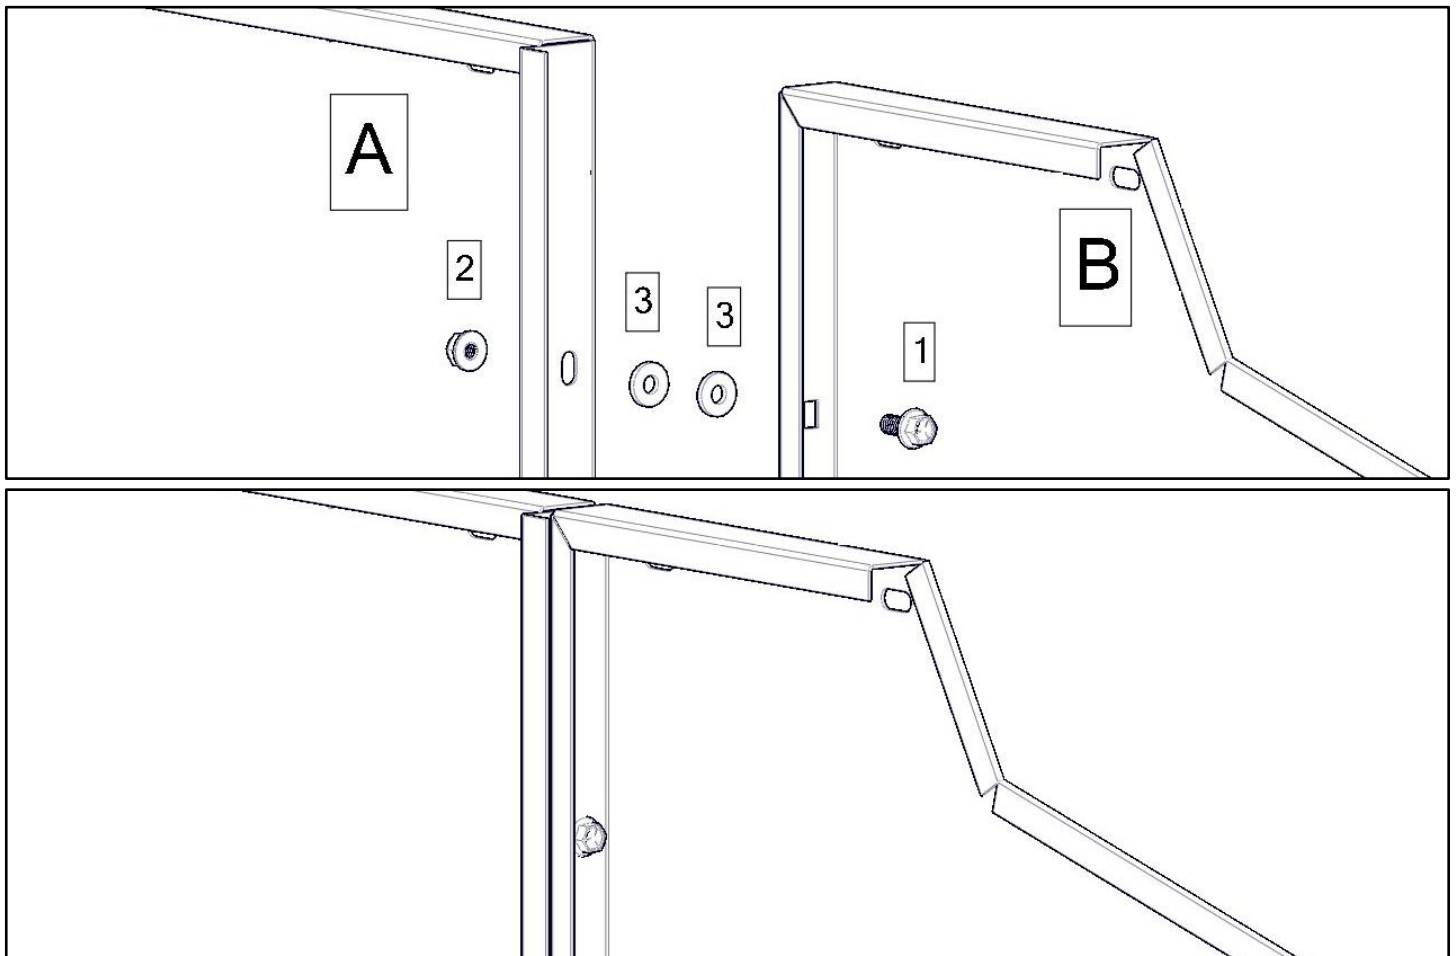

- Repeat 3 more times as shown. Be sure to insert the washers between the panels.
- Some like to leave bolts snug tight to allow movement until partition is installed into vehicle.

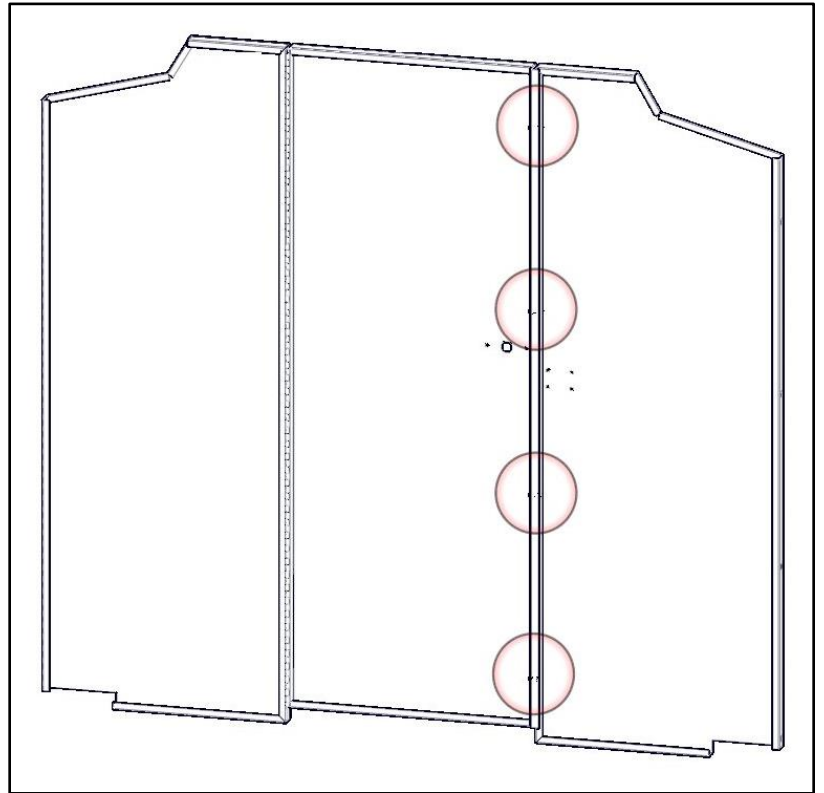

Follow instructions of desired wing kit to install into vehicle.