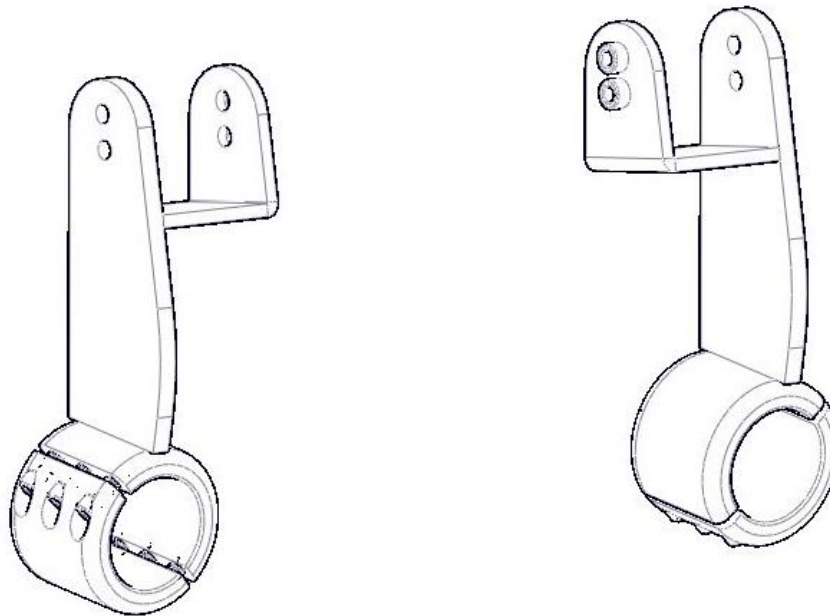




# Installation Guide

---



55031

---

Kargo Master Safari  
Rancho Cordova, CA 95742  
800-343-7486  
CustomerService@Safari.com

---

DATE: \_\_\_\_\_

---

**\*PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING,  
INSTALLING AND USING THIS PRODUCT\***

---

## Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

---

## Tools Needed

- |                     |  |
|---------------------|--|
| • 1/4" Allen Wrench |  |
|---------------------|--|
- 

## Table of Contents

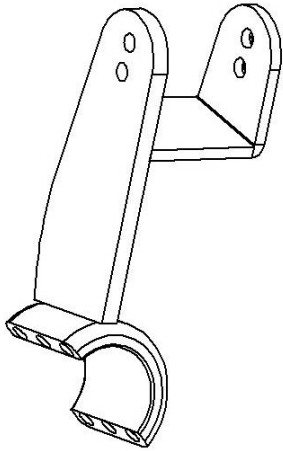
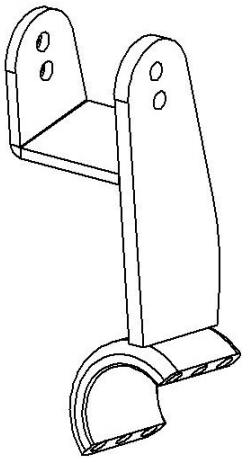
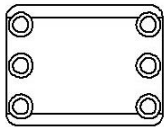
Parts List .....	2
Hardware List .....	3
Step 1 Determine which side brackets are installed .....	4
Step 2 Installation on bumper .....	6

---

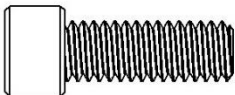
## Before You Begin

- These instructions replace the frame mounting from other instructions.
  - Only use these if AEV bumper is installed on JEEP.
  - Have the rest of Congo Pro or Congo Sport installed.
  - “Snug Tighten” means to tighten so the parts are not all over the place, but not so tight that they can not be moved or adjusted to fit its application.
-

## PARTS

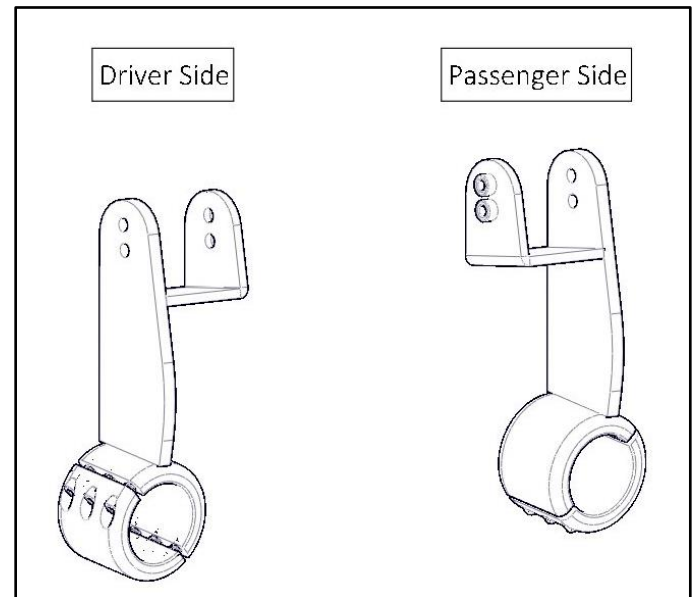
ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
1		55031-10	DS Bracket Assembly	1
2		Mirror-55031-10	PS Bracket Assembly	1
3		55031-10 CAP	BRACKET CAP	2

## HARDWARE

ITEM NO.	SCALE	PART NUMBER	DESCRIPTION	QTY.
A		90128A582	.312-18 x .875 SHCS	12

## Step 1

- Place bracket assembly on correct side of vehicle.
- The bracket should have the pemnuts closest to the JEEP, while angled towards the rear.



## Step 2

- Slide bracket around tube section on bumper.
- Bolt clamp cap to clamp using six 5/16" x .875" socket head cap screws (A).
- SNUG TIGHTEN.
- Repeat on passenger side of vehicle.



GO BACK AND TIGHTEN ONCE CAGE IS COMPLETELY INSTALLED.

YOUR INSTALLATION IS NOW COMPLETE.

